



Forestay Servicing

Petticrows Tips and Guides

REPLACE FORESTAY


Petticrows Build International Dragons

petticrows@petticrows.com

1. One end is swaged on, the other swage with the hole is loose



2. Put wire through hole in the mast

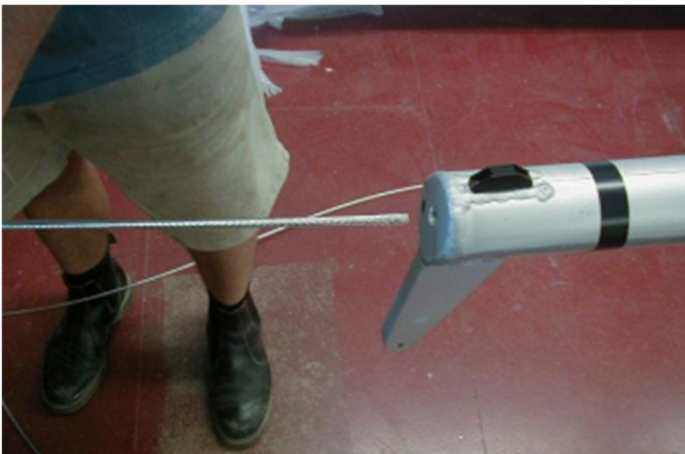


3. Take out the spin halyard sheave box



4. It is useful to have a piece of wire with a hook to guide the forestay into the tube



5. Pull all the wire through until the top swage is in the tube and can go no further

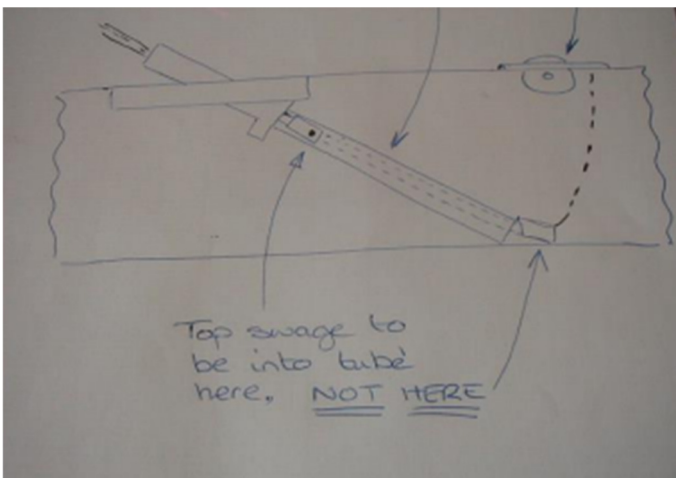

6. Pull the wire tight across the mast and mark from top of mast collar 272 mm and cut



7. Slide swivel on



8. Swage on bottom sheave. This needs to be done with a professional swage machine



9. Replace spinnaker halyard sheave

